

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

TT	Hãng sản xuất	Nhóm máy, model, đời máy, HĐH	Vị trí cài đặt
1	Nokia	S40 2nd Edition: 2610 2626 2855 5070 6030 6070 6080 6101 6102 6103 6230 8801 5140i 6102i	Menu/ Applications
		S40 2nd Edition (initial release) 7360	Menu/ Applications
		S40 3rd Edition: 2865 6111 6165 6275 7370	Menu/ Applications
		S40 3rd Edition (initial release): 6265 6270 6280 6282 6288 2865i 6265i 6275i	Menu/ Applications
		S40 3rd Edition, FP 1: 6125 6126 6131 6133 6136 6151 6233 6234 6131 NFC 8600 Luna 8800 Sirocco Edition	Menu/ Applications

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		<p>S40 3rd Edition, FP 2:</p> <p>6700 slide 5200 5300 6085</p> <p>6086 6300 7373 7390</p> <p>3109 Classic 3110 Classic</p> <p>3500 Classic</p>	<p>Menu/ Applications hoặc Menu/ Games</p>
		<p>S40 5th Edition:</p> <p>6263 6267 6555 3610 fold</p> <p>7500 Prism</p>	<p>Menu/ Applications hoặc Menu/ Games</p>
		<p>S40 5th Edition LE:</p> <p>2630 2660 2760 1680 Classic 2600 Classic</p>	<p>Menu/ Applications hoặc Menu/ Games</p>
		<p>S40 5th Edition, FP 1:</p> <p>2730c 3555 6301 2700 Classic</p> <p>3120 Classic 3208c 3600 Slide</p> <p>5130 XpressMusic</p> <p>5220 XpressMusic</p> <p>5310 XpressMusic</p> <p>5610 XpressMusic</p>	<p>Menu/ Applications hoặc Menu/ Games</p>

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

	<p>6208 Classic 6212 Classic 6300i 6500 Classic 6500 Slide</p> <p>6600 Fold 6600Slide 6600i slide</p> <p>7210 Supernova</p> <p>7310 Supernova 7610 Supernova</p> <p>7900 Prism 8800 Arte</p> <p>8800 Carbon Arte 8800 Gord Arte</p>	
	<p>S40 5th Edition, FP 1 LE:</p> <p>5000 2323 Classic 2330 Classic</p> <p>2680 Slide 7100 Supernova</p>	<p style="text-align: center;">Menu/ Applications hoặc Menu/ Games</p>
	<p>S40 5th Edition, FP 1 lite:</p> <p>2690 2220 slide</p> <p>2320c 2720 fold</p>	<p style="text-align: center;">Menu/ Applications hoặc Menu/ Games</p>
	<p>S40 6th Edition:</p> <p>5330 6350 7020 7230</p> <p>2710 Navigator 3710 fold</p> <p>3720 classic 6303i Classic</p> <p>6750 Mural C3 X2 X3 6303</p>	<p style="text-align: center;">Menu/ Applications hoặc Menu/ Games</p>

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

	Classic 6700 Classic 7510 Supernova	
	S40 6th Edition Lite: C1 C2	Menu/ Applications hoặc Menu/ Games
	S40 Developer Platform 2.0: 3152 3155 3220 5140 6020 6060 6152 6155 6170 6235 6255 6822 7260 7270 8800 3155i 6155i 6230i 6235i	
	S60 2nd Edition, FP 2: 6630 6680 6681 6682	Menu/ Owner (My Own)
	S60 2nd Edition, FP 3: N70 N72 N90	Menu/ Owner (My Own)
	S60 3rd Edition: N75	Menu/Application

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		<p>S60 3rd Edition (initial release):</p> <p>3250 5500 E50 E60 E61</p> <p>E61i E62 E65 E70 N71</p> <p>N73 N77 N80 N91 N91 8GB</p> <p>N92 N93 N93i</p>	Menu/Application
		<p>S60 3rd Edition, FP 1:</p> <p>6290 5700 XpressMusic</p> <p>6110 Navigator 6120 Classic</p> <p>6121 Classic 6124 Classic</p> <p>E51 E63 E66 E71</p> <p>E90 Communicator</p> <p>N76 N81 N82 N95 N95 8GB</p> <p>N95-3 Nam</p>	Menu/Installations
		<p>S60 3rd Edition, FP 2:</p> <p>6650 5320 XpressMusic</p> <p>5630 XpressMusic</p> <p>5730 XpressMusic</p> <p>6210 Navigator 6220 Classic</p>	Menu/Installations

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		<p>6710 Navigator 6720 Classic</p> <p>E55 E75 N78 N79 N85</p> <p>N86 8MP N96 N96-3 6788</p> <p>6730c 6760 slide 6790 slide 6788i C5</p> <p>E52 E52 E72 E73 N85 X5</p>	
		<p>S60 5th Edition:</p> <p>5230 5230 5235</p> <p>5530 XpressMusic 5800XpressMusic</p> <p>N97 X6</p>	Menu/Installations
		<p>Dòng khác</p>	<p>Menu/ Applications</p> <p>Hoặc Menu/ Applications/ Games</p> <p>Hoặc Menu/ Installations</p>
2	Sony Ericsson	<p>M1 Aspen U5 Vivaz</p> <p>U8 Kanna X10 Mini X10 Mini Pro</p> <p style="padding-left: 100px;">X10 Xperia C510</p> <p>TM717 Equinox U1 SatioU10 Aino</p> <p style="padding-left: 100px;">U100 Yari F100 Jalou</p> <p>T715 J105 Naite S312 T707</p>	<p>Menu/ Organizer/ Applications</p> <p>Hoặc Menu/ Organizer/ Games tùy chọn lựa của người dùng lúc cài</p>

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

W508	W518a	C901	C903	W205
W395	W715	W995	C905	S302
F305	G705	W705	T303	
TM506	W595	G900	P200 (paris)	
W902	Z780	K858	R300	R306
T280	W350	W980	Xperia	
Z770	T700	W302	G700	G502
C702	C902	W760	Z555	
K530	K660	M610	W890	w908
K770	P700	S500	v640	Z25
K200	T250	T658	Z310	Z320
K550	K818	W888	K850	W580
W960	P1i	W380	K630	T650
W660	W910	K810	Z750	W880
W200	W700	W810	Z530	Z558
K618	M600	M608	Z550	Z610
950	W958	K790	W830	Z710
W300	W900	W800	K750	Z800

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		<p>P990 Z520 S600 J300</p> <p>K758 D750 s710 V800 T618</p> <p>F500 K700 Z500 Z1010 K310</p> <p>K610 K800 V630 W710 W850</p> <p>K600 K608 V600 W600</p> <p>550 Z300 K300 S700</p>	
3	Samsung	<p>GT S5550 GT M2520 GT S3550</p> <p>GT S7350 - UltraSlide GT S3650 Corby</p> <p>GT M2310 B3313 SGH S5510</p> <p>SGH A887 GT B3210 GTB3310</p> <p>SGH i637 GT B5702 GT B7330</p> <p>GT C3110 GT C5510 GT E1360</p> <p>GT E2100 GT i7500 Galaxy</p> <p>GT M2510 GT M2513 GT M2710</p> <p>GT M3310 GT S3110 GT 3500</p> <p>GT S5050 GT S5503 SGH A167</p> <p>SGH A177 SGH A657 SGH A796</p> <p>SGH A797 SGH J165 SGH M200</p> <p>SGH P250 SGH T239 SGH T349SGH</p>	Menu/ Applications/ Games (hoặc Java)

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

T401G	SGH Y469	SGH T559
SGH T659 M340	SPH M240 SPH M550	SPH M330SPH SPH M560
GT B3410	GT S8300	GT S3653 Corby
GT S5200	GT B2100	GT S3930
SGH E215	GT C5220	GT S5320
GT S5500	GT S6700	GT C3050 Stratus
GT C3060	GT C5212 Fizz	GT C6112
GT E2130 Guru	GT M7500	GT S5150
SGH T746	GT C3010	GT C5130
GT M5650	GT S3110	GT S8000 Jet
GT C3212	GT s5560Marvel	
SGH A527	SGH T459	SGH F490
SGH E251	SGH F275	SPH M540
GT S3030	SGH i200	SGH F480
GT C6625	SPH Z400	SGH D780
SGH M620	SGH L170	GT B2700
GT E2510	GT i7110	GT S7330
GT S9402	SGH A227	SGH A237

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

SGH A637	SGH A736	SGH A746
SGH A777	SGH A821	SGH A837
SGH B220 Impact	SGH B320	SGH B510
SGH F110	SGH F268	SGH F270
SGH F400	SGH F408	SGH G400
SGH G618	SGH i400	SGH i640
SGH i740	SGH i907	SGH J150
SGH J210	SGH D630	SGH J800
SGH L310	SGH L320	SGH L708
SGH L770	SGH L810	SGH L870
SGH M150	SGH M310	SGH M320
SGH M610	SGH P220	SGH P270
SGH P960	SGH T109	SGH T229
SGH T336	SGH T636	SGH U800
SGH X550	SPH i325	SPH M220
SPH M310	SPH M520	SGH L700
SGH T819	SGH F488	GT M3510 Beat
SGH B500	SGH D980	SGH J700
SGH J750	SGH T919	SGH M630

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

SGH B520	SGH J706	SGH J770
SGH U908	SGH B820	GT M3200
GT S3600	SGH A767	SGH T339
SGH U900	SGH A827	SGH F250
SGH J400	GT C6620	GT i8510 Innov8
SGH L811	SGH-T729	SPH M510
SGH Z630	SGH C160	SGH T329
SGH E200	SGH A711	SGH L760
SGH G808	SGH A226	SGH A411
SGH A437	SGH A517	SGH A561
SGH A706	SGH A727	SGH A737
SGH A747	SGH A801	SGH C520
SGH E830	SGHF210	SGH F330
SGH F338	SGH F700	SGH i520
SGH i620	SGH i71	SGH J200
SGH J610	SGH L600	SGH L768
SGH P180	SGH P260	SGH T409
SGH T429	SGH T439	SGH T539

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

SGH E740	SGH E790	SGH U100
SGH U300	SGH U708	SGH Z360
SGH ZM60	SPH M300	SPH M620
SGH E210	SGH A717	SGH J600
SGH P520	GH Z240	SGH D900
SGH F510	SGH i550	SGH A436
SGH U600	SGH E840	SGH i450
SGH i718	SGH Z170	SGH D880
SGH E950	SGH i560	SGH i617
SGH G600	SGH J208	SGH X650
SGH D807	H Z230	SGH D908
SPM M500	SGH X820	SGH E898
SGH E788	SGH P310	SGH f500
SGH E780	SGH P920	SGH C406
SGH A701	SGH ZV40	SGH E770
SGH T209	SGH D307	SGH D347
SGH D520	SGH D806	SGH E388
SGH E496	SGH E906	SGH i320

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

SGH P900	SGH P910	SGH P940
SGH T619	SGH T709	SGH T719
SGH X300	SGH X500	SGH X520
SGH X670	SGH Z310	SGH Z330
SGH Z370	SGH Z400	SGH Z560
SGH Z620	SGH Z710	SGH ZX20
SGH T519	SGH E870	SGH X530
SGH E570	SGH X506	SGH X540
SGH M610	SGH A707	SGH C400
SGH E250	SGH E390	SGH E500
SGH E900	SGH i607 Blackjack	
SGH Z150	SGH Z720	SGH A960
SGH D407	SGH D840	SGH E376
SGH E380	SGH E420	SGH E490
SGH E690	SGH P200	SGH X686
SGH ZV50	SGH A900	SGH D830
SGH E370	SGH E890	SGH Z540
SGH Z510	SPH A940	SGH Z500

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

SGH X495	SGH T319	SGH E730
SGH E860	SGH E880	SGH i300
SGH P300	SGH P858	SGH T509
SGH E640	SGH E736	SGH E750
SGH X640	SGH X800	SGH X300
SPH A800	SPH A880	SPH A920
SGH D820	SGH T809	SGH Z130
SGH D730	SGH P906	SGH D600
SGH P850	SGH D800	SGH T629
SGH Z530	SGH E350	SGH E530
SGH E810	SGH D500	SGH E808
SGH E710	T S5603	SGH G800
SGH i600	SPH m800	GT M8800
SGH A867	GT B5310 Corby Pro	
GT M3710	GT M7600	GT M7603
GT M8910	GT S7070	GT S7220
GT S7550	SGH A885	
SGH A897 Mythic	SGH T749	

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		SGH T929 SGH T939 SPH M850 GT B5722 SGH i900 SPH M900 Moment GT B3410W GT S5600 GT S5233 Avila GT S5630c GT S5620 Monte GT S8003 Jet SPH M7350 OZ Omnia GT B7300 GT C3510 Corby_POP GT S5230 Star GT A877 GT S5603 star GT I8000 Omnia II GT I8910 Omnia GT I6220 starTV GT B7610 OmniaPro SPH M810	
4	Blackberry	8100 8110 8120 8130 8220 8230 8300 8310 8320 8330 8350i 8520 8700c 8700f 8700g 8700r 8703e 8707g 8707h 8707v 8800 8820 8830 8900 9000bold	Desktop

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

5	LG	KF350	U8290	U8330	Menu/ Game&Aplication
		B2150	"BL20 New Chocolate"		
		C1150C1200	C2200		
		C3380	CB630 Invision		
		CE110	CE500	CF360	
		CG300	CP150	CU320	
		CU405	CU515	CU575 Trax	
			F1200	F2100F2250	
		F2300	F2410	F2500	
		F3000	F9100	G1610	
		G4020	G5600	GB170	
		GB210	GB230 Julia		
		GB270	GC900 Viewty Smart		
		GD510	GD710 Shine II		
		GD900 Crystal	GM210		
		GM310	GM630	GM730 Eigen	
			GT500 Puccini		
		GT505	GU230	GU280	
		GW520 Calisto	GW525 GW820 eXpo		

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

	GX200	HB620T	
	KB770	KC550	KC560
	KC780	KC910 Renoir	
	KE260	KE520	KE590
	KE820	KF240	KF245
	KF310	KF311	KF390
	KF690	KF700	KF757 Secret
	KF900 Prada II		
	KG190	KG210	KG225
	KG240	KG280	KG330
	KG810	KG920	KM386
	KM500	KM710	KP170
	KP200	KP202	KP210
	KP220	KP235	KP260
	KP265	KP270	KP320
	KP330	KS500	KS660
	KT520	KT525	KT610
	KU250	KU311	KU385
	KU450	KU580	KU830

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

KU950	L1100	L1150
L1200	L1400	L3100
L5100	L600v	LX160 Flare
	LX350	LX370 Force
	LX400	LX550 Fusic
	M4410	M6100
MG105	MG230	MG280
MG295	MT375 Lyric	
PM225	PM325	S5000
S5100	TE365	TU575
TU720	U300	U370
U400	U8120	U8130
U8138	U8180	U8210
U830	U8360	U8380
U8360	U8380	U8500
U8550	U880	U890
U900	U960	U970 Shine
	G1600	KE500
KF300	KU730	KU970
MG100a	U8110	B2070

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

C1100	C3100	G7100
KE850 Prada	KE990 Viewty	KF755
KP199	MX510	P7200
TU515	V9000	C2500
CG225	CU400	GW620 Eve
	KF600	G220
KG290	KS360 Etna	
LX570 Fusic2	ME550	MG220 TU500
	U250	
BL40 New Chocolate		C2600
CU915 Vu	CU920 Vu	
GT360 Tribe	GT365 Neon	
KM900 Arena	KP570	KU380B2100
	C2000	CT810 Incite
KP500 Cookie	KS20	KU800 Chocolate
T5100	U310	G4015
GB250	GR500 Xenon	KM380
KU990 Viewty		
KE800 Chocolate Platinum		

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		KP130	B2000	C3400	
		CU720 Shine KG300		GW300 Onliner/Etna 2	
		KG320	KP115	KP215	
		KS10 Joy		LX260 Rumor	
		LX600 Lotus		TU915	
		GD580 Lollipop		KE770 Shine	
		KF750 Secret		KG245	
		KG195 KM555	KG200	LX610 Lotus Elite	
		S5200	F2400	GM200	
		KE600		LX265 Rumor II	
		KP110		KE970 Shine	
		KF510	GD330	CU500	
6	Fmobile	Fmobile S880I		Fmobile F99	
		Fmobile S550		Fmobile B930	
		Fmobile S700		Fmobile B650	
		Fmobile B720		Fmobile B510	
		Fmobile B950		F-mobile B790	
					Menu/ Java/ Java

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		Fmobile S880 Fmobile S600	Fmobile B860	
7	Qmobile	Q Mobile M2	Q Mobile M3	Menu/Games
		Q Mobile ME01	Q Mobile M45	
		Q Mobile F500	Q Mobile F446	
		Q Mobile P2	Q Mobile Q215	
		Q Mobile Q241	Q Mobile Q25i	
		Q Mobile F73	Q Mobile F680	
		Q Mobile Q26i	Q Mobile Q540	
		Q Mobile Q230	Q Mobile 218	
		Q Mobile Q213	Q Mobile Q266	
		Q Mobile Q460	Q Mobile Q128	
		Q Mobile Q228	Q Mobile M22i	
		Q Mobile ME115	Q MobileME310	
		Q Mobile P1	Q MobileME112	
		Q Mobile ME114	Q Mobile F363	
		Q Mobile M12	Q MobileQ130i	
		Q Mobile SHE	Q Mobile M55 Q Mobile	

CÁC DÒNG MÁY HỖ TRỢ MSEARCH

		P4	Q Mobile Q132	
		Q Mobile Q131		